

SUMMIT PINE LOG PLACEMENT INSTRUCTIONS

CAUTION.....WARNING.....IMPORTANT

USE ONLY ISOFLAMES/ISOKERN BURNERS AND VALVES WITH THIS ISOFLAMES/ISOKERN LOG SET.



ISF-SP-24 shown

earthcore®

LOG SET IMPORTANT INFORMATION

This instruction contains recommended log placement for these ISOFLAMES/ISOKERN logs which will promote good combustion and provide superior flame pattern and appearance. **Use these logs only with an ISOFLAMES/ISOKERN burner system.**

Adequate ventilation is absolutely necessary! You must position and maintain the log layout as shown here to ensure optimal operation of the burner system (see Important below).

Please read these instructions completely and carefully.

Important: Adequate ventilation is absolutely necessary. You must position and maintain the log layout as shown here to ensure optimal operation of the burner system. Some carbon build up (sooting) may occur where flames strike the logs. If carbon build up (sooting) continues, correct top logs placement to allow more opening(s) for flame(s) before sooting becomes worse. **If any sooting occurs outside of the firebox (i.e. on the walls), turn off unit immediately and contact a qualified professional service technician.**

WARNING: Use **ONLY** ISOFLAMES/ISOKERN burners and valves with this ISOFLAMES/ISOKERN gas log set. **Failure to do so may result in property damage or personal injury, and will void listings, certifications, and invalidate claims made to Earthcore** Contact your local ISOFLAMES/ISOKERN dealer if you need more information.

This product is only warranted when used as part of an ISOFLAMES/ISOKERN vented burner system.

WARNING: This gas log set is for use with ISOLAMES/ISOKERN burners (and parts) ONLY.

CAUTION: Burn hazard! Logs will remain hot for some time after use.
If you need to reposition any log to maintain the proper layout, use heat resistant gloves or allow logs adequate time to cool before handling.


Failure to use ISOFLAMES/ISOKERN burners and valves may result in a **DANGEROUS** situation and in property damage, personal injury or even death; will void listings and certifications; and will void any insurance coverage by Earthcore or our insurers.

BEGIN WITH THE GENERIC LOG AND EMBER STEPS BELOW, THEN LOCATE THE PAGE FOR YOUR SIZE CHOSEN TO COMPLETE PLACEMENT.


Generic Placement Steps

Important: DO NOT place any embers on top of the flash tube to ensure proper operation.


All models begin with the log and ember placement shown below. Continue with the appropriate section (on one of the following pages) specific to your log set.

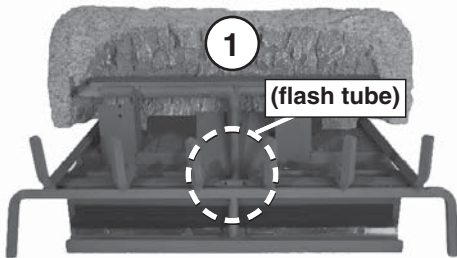


Place the rear log (log #1) as shown. The log should rest flat between the rear brackets and top burner.

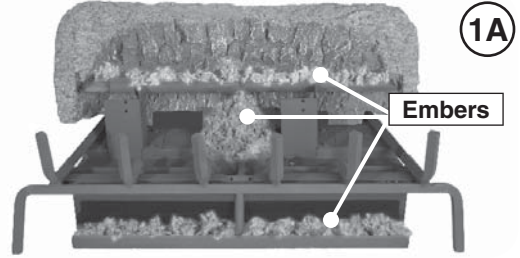


Place the supplied glowing embers evenly in the areas shown. **Break up any clumps that may have developed during shipment. Keep some embers for future placement along the front log.**

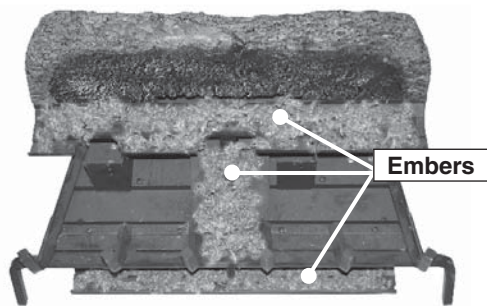

Ember placement detail.

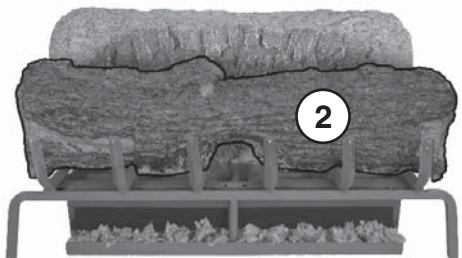


Place the front log (log #2) as shown. Rest the log with its back against the burner assembly behind it. **DO NOT place it forward or on top of the grate fingers.**

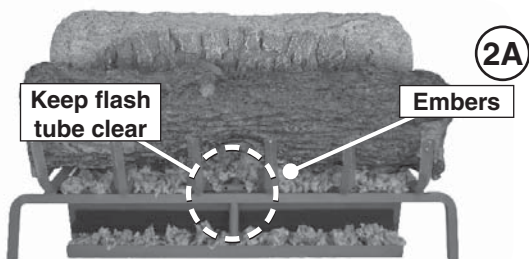


Place the remaining glowing embers evenly in the area along the front log as shown.

Store any excess embers if applicable.

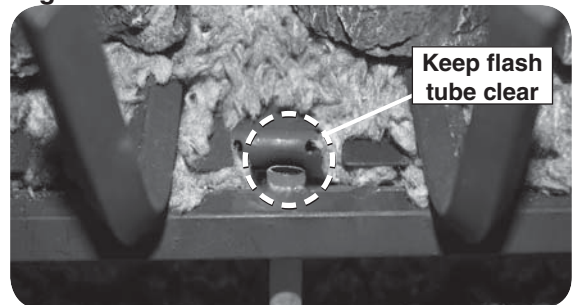


DO NOT place any embers on top of the flash tube to ensure proper operation. **Keep the area shown above clear at all times.**

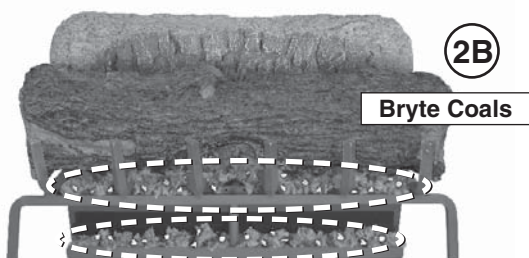

Separate half of the supplied bryte coals into small pieces, and evenly place them over the glowing embers in the middle ember bed as shown. Repeat this process for the remaining (second half) of bryte coals over the bottom ember bed.

Summit Pine Log Placement Instructions (24" & 30" models)

ISF-SP-24 & ISF-SP-30 PARTS LIST

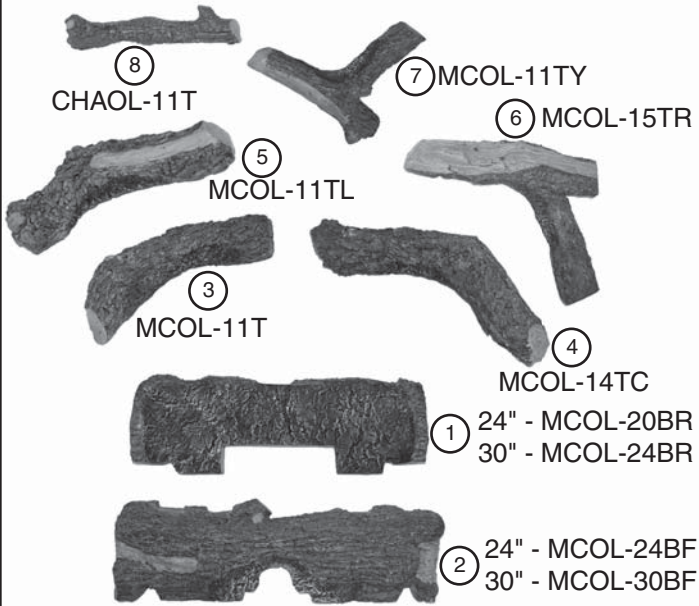


24" log set shown


CAUTION: Burn hazard! Logs will remain hot for some time after use.

Refer to page 3 for details on proper bottom log and ember placement.


I

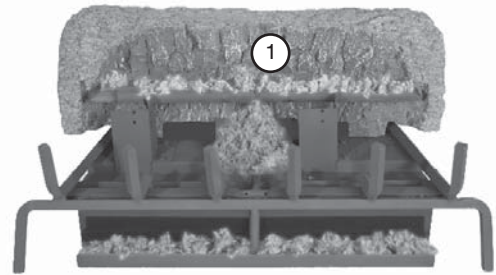


II

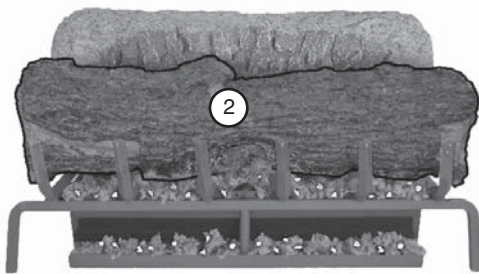

III

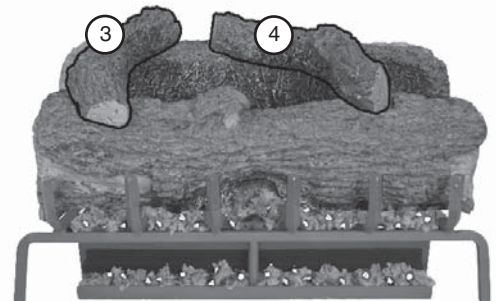


IV

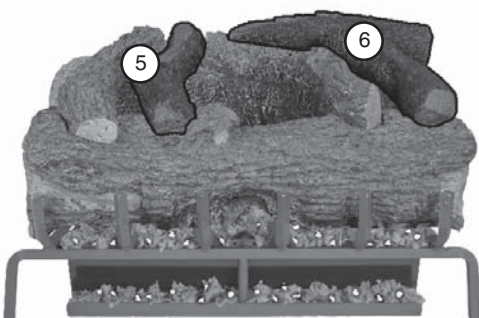


V

Final Log Placement

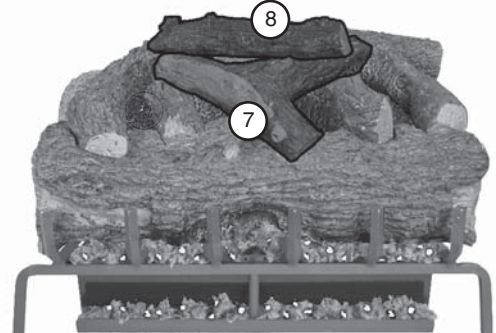

Summit Pine Log Placement Instructions (39" model)

ISF-SP-39 PARTS LIST

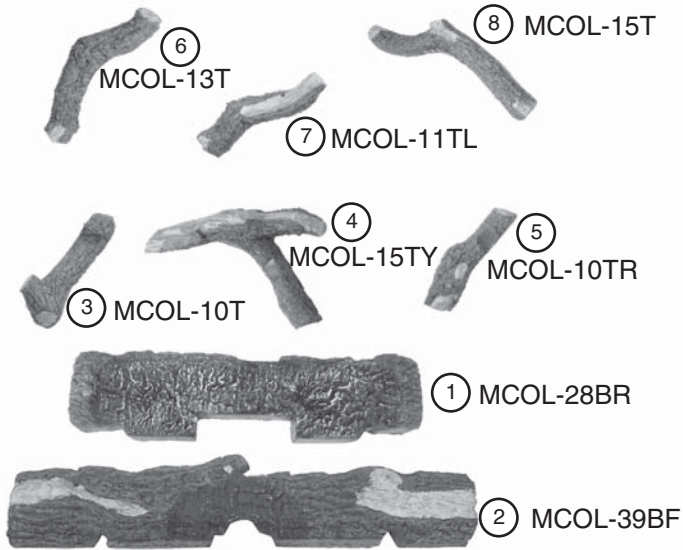


CAUTION: Burn hazard! Logs will remain hot for some time after use.


2 Boxes	Items
ISF-SP-39B (Front log)	MCOL-39BF
ISF-SP-39T (Rear and Top logs)	MCOL-28BR, MCOL-10T, MCOL-15TY, MCOL-10TR, MCOL-13T, MCOL-11TL, MCOL-15T

Refer to page 3 for details on proper bottom log and ember placement.


I

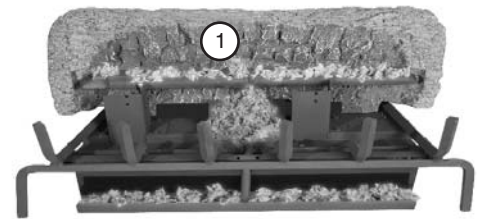

II

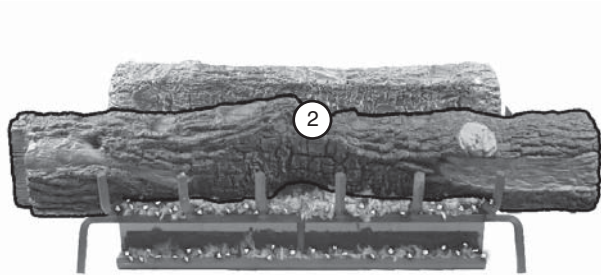


III

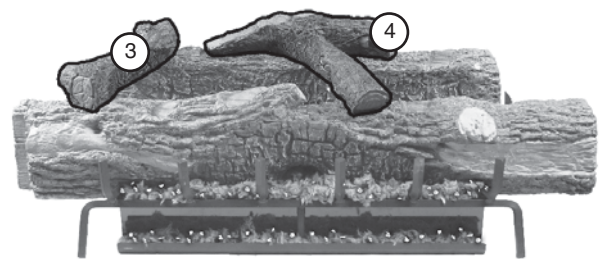


Final Log Placement

IV

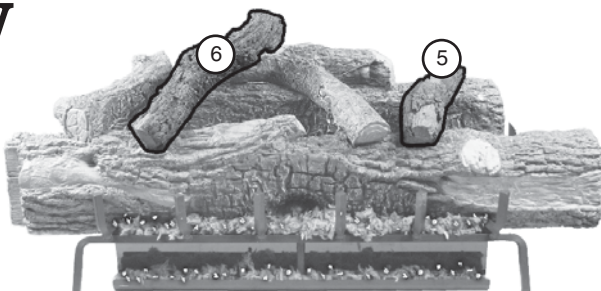

V

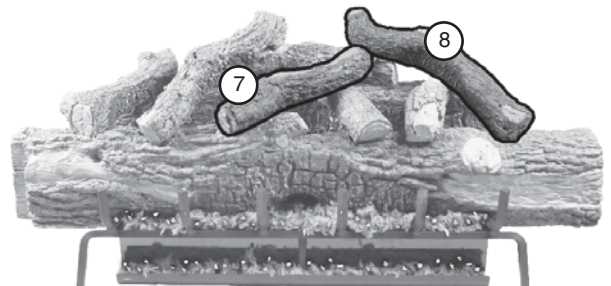

NOTES PAGE

Please use this page to record any information that you may want to have at hand.